


BEFORE YOU START...


1. Choose a clean, level, spacious assembly area. Avoid hard surface that may damage the product.
2. Check and ensure that you have all required contents for complete assembly.
3. Always read the assembly instructions carefully before beginning assembly.
4. The packaging and contents can be a choking hazard, therefore keep out of reach of small children at all the times

Step 1 Join sofa by back connector

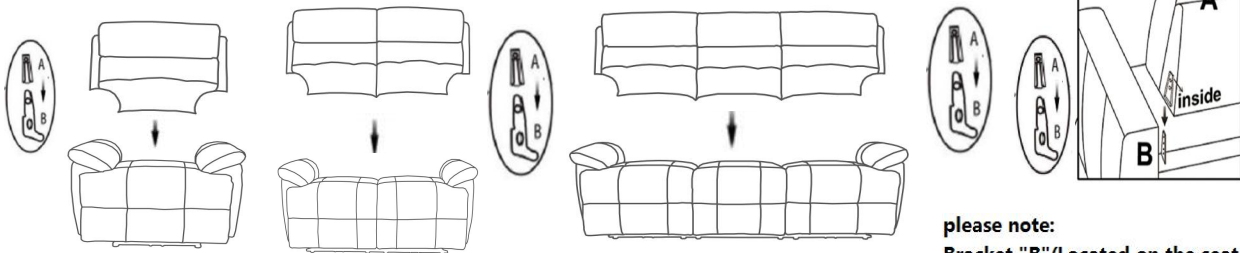

please note:
Bracket "B" (Located on the seat frame of the sofa) inserts into **Bracket "A"** (Located inside the back frame of the sofa)


Step 2 Remove the Power cord which is tied to the steel mechanism at the bottom of the recliner and insert the cord into the socket at the back bottom right corner of the recliner. Wire connection. Plug power cord into the available electrical outlet.

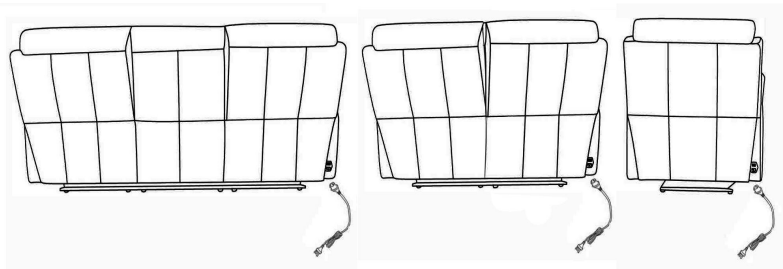

PARTS LIST:	
Double electrical reclining sofa:	
A	Power cord × 1 pcs
Double electrical reclining seat:	
A	Power cord × 1 pc
Electric recliner :	
A	Power cord × 1 pcs

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Step 2 Assembly complete

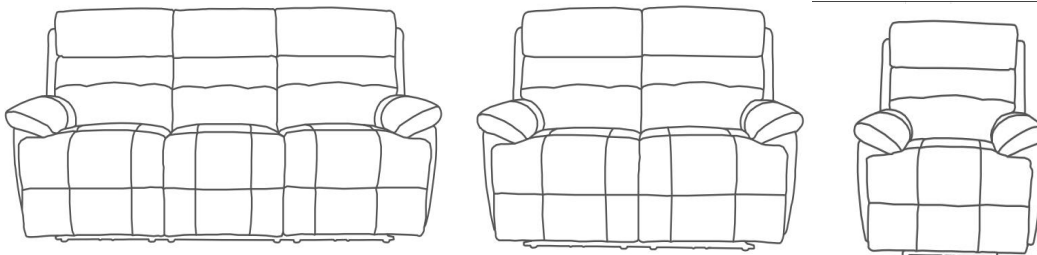

Function: Switch Instruction

1. Open Recliner
2. Close Back to sitting position
3. USB Charger

