


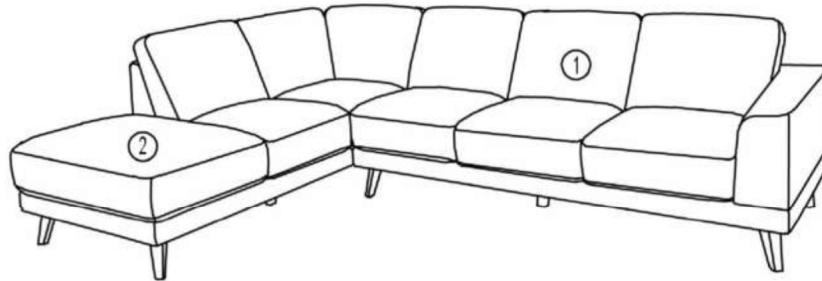

Warehouse Furniture Clearance

ITEM CODM-Bristol(S-7125)

Building 3 West 605 Zillmere Rd Aspley QLD 4035



BEFORE YOU START---

1. Always read the assembly instructions carefully before beginning assembly.
2. The packaging and contents can be a choking hazard, therefore keep out of reach of small children at all the times

STEP 1

	1	2		
A			Feet	4PCS
B			Allen Key	1PCS
C			Washer	4PCS
D			Bolt	4PCS
E			Cork	4PCS
F			Central Feet	1PCS
G			Felt Pads	1PCS

STEP 2

