


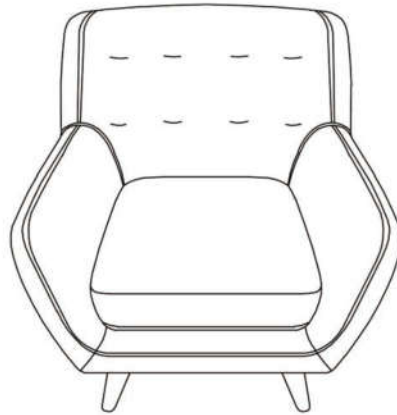

Warehouse Furniture Clearance

ITEM CODM-Casey(S-7070A)

Building 3 West 605 Zillmere Rd Aspley QLD 4035




#### BEFORE YOU START...

1. Always read the assembly instructions carefully before beginning assembly.
2. The packaging and contents can be a choking hazard, therefore keep out of reach of small children at all the times

#### STEP 1

##### Hardware List

A		Feet	4PCS
B		Hexagon Key	1PCS
C		Washer	4PCS
D		Bolt	4PCS
E		Cork	4PCS
F		Felt pads	4PCS

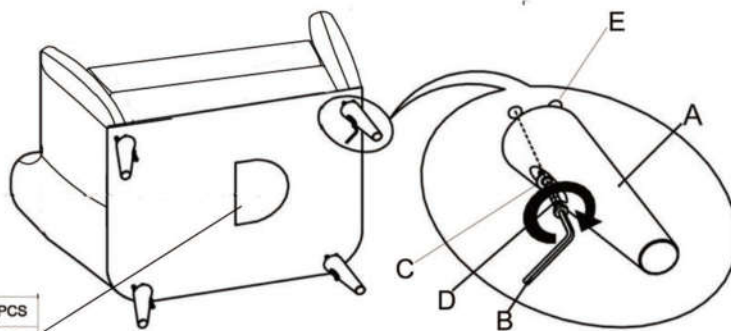

#### STEP 2

