




ASSEMBLY INSTRUCTION


Item code- H-6021

Imported by JCI Global

Building 3 West 605 Zillmere Rd Aspley QLD-4035

ITEM	DESCRIPTION/PART	ITEM	DESCRIPTION/PART
A	 S2 1PC	B	 WOODEN FEET 4PCS
C	 CUSHION 3PC		

Step 1 Attach Feet

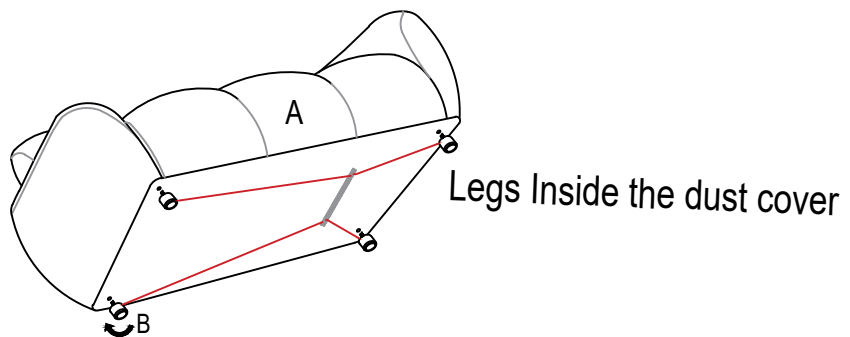

Step 2 Complete Assembly

