

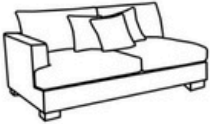


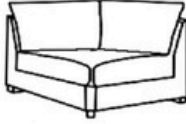

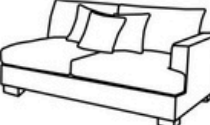



# ASSEMBLY INSTRUCTION

Item code- Fremont (9208)



Imported by JCI Global

Building 3 West 605 Zillmere Rd Aspley QLD-4035



ITEM	DESCRIPTION/PART	ITEM	DESCRIPTION/PART
A	 L2.5S 1PC	B	 CNR 1PC
C	 R2.5S 1PC	D	 Plastic midfoot 6 PCS
E	 Cushion 6PCS	F	 Spanner 3PCS
G	 Screw 22 PCS	H	 Plastic foot 11PCS

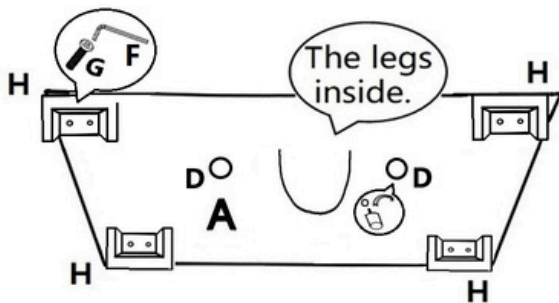



**A**

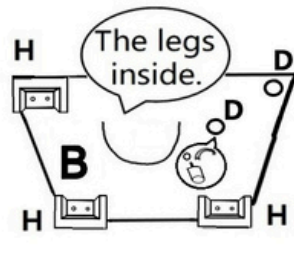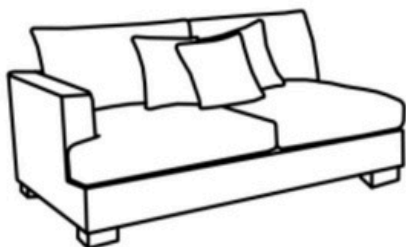

**B**

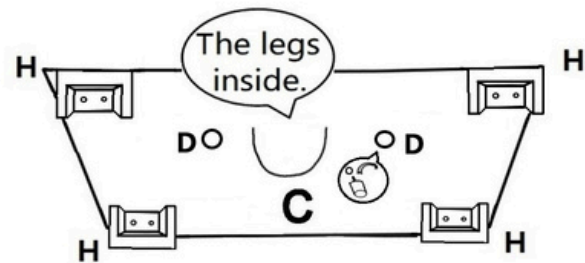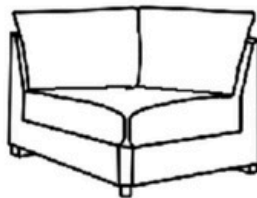

**C**

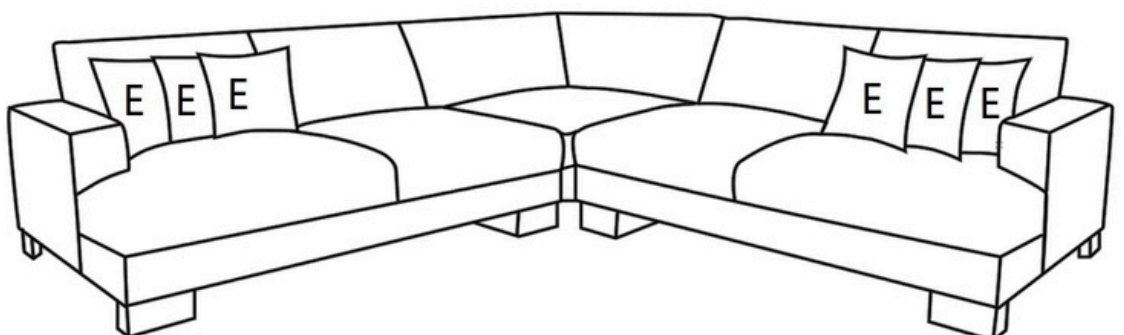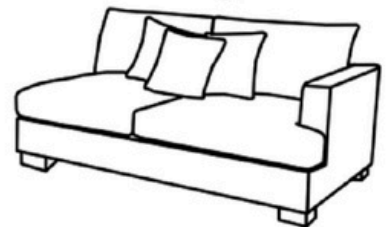

**Two person  
required.**