




Warehouse Furniture Clearance

ITEM CODM-Hilton(S-7168A)

Building 3 West 605 Zillmere Rd Aspley QLD 4035




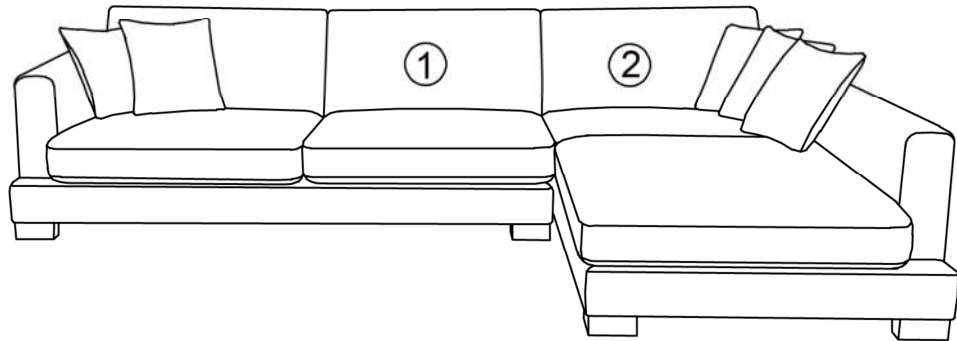


BEFORE YOU START...

1. Always read the assembly instructions carefully before beginning assembly.
2. The packaging and contents can be a choking hazard, therefore keep out of reach of small children at all the times

STEP 1

		①	②	
A		Feet	4PCS	
B		Central Feet	1PCS	
C		Self tapping Screw (M5*60mm)	13PCS	
D		Felt Pads	12PCS	

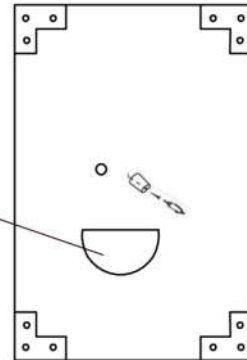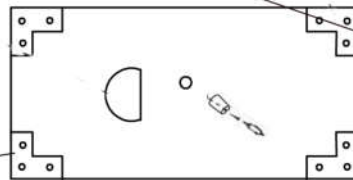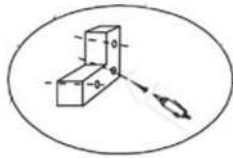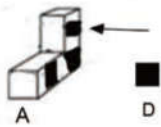

STEP 2

