



A		1 pc
B		1 pc
C		2 pcs
D		1 pc
E		1 pc
F		2 pcs
G		2 pcs
H		2 pcs

HARDWARE		
1		4 pcs
2		4 pcs
3		6 pcs
4		6 pcs
5		34 pcs
6		14 pcs
7		1 pc
8		1 pc
9		4 pcs

**Step 1**

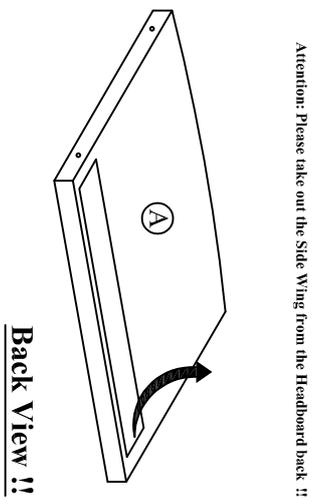


**Step 2**

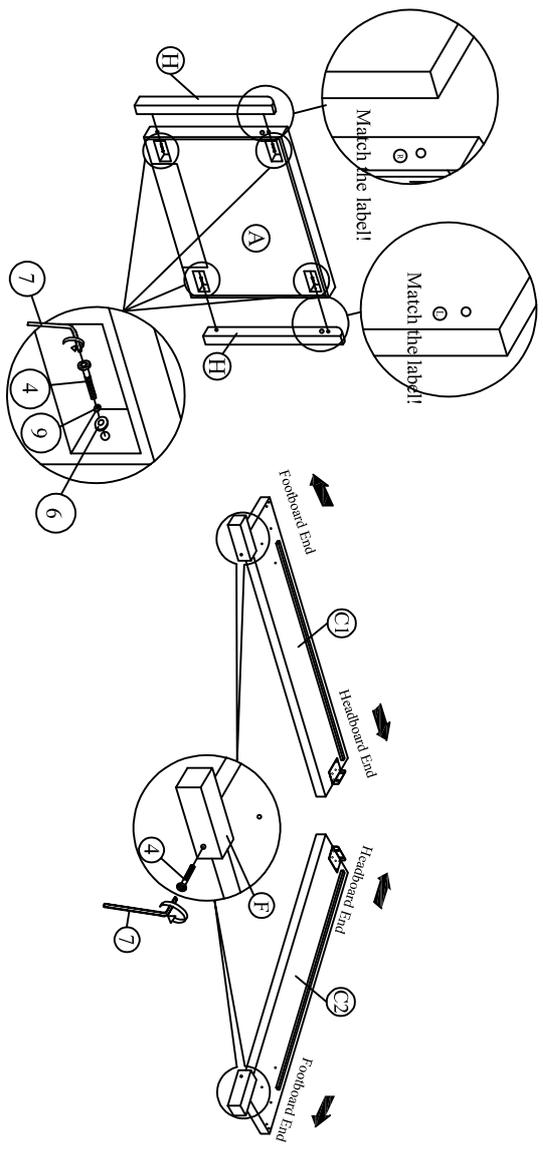


**Step 3**

Marking on the wooden

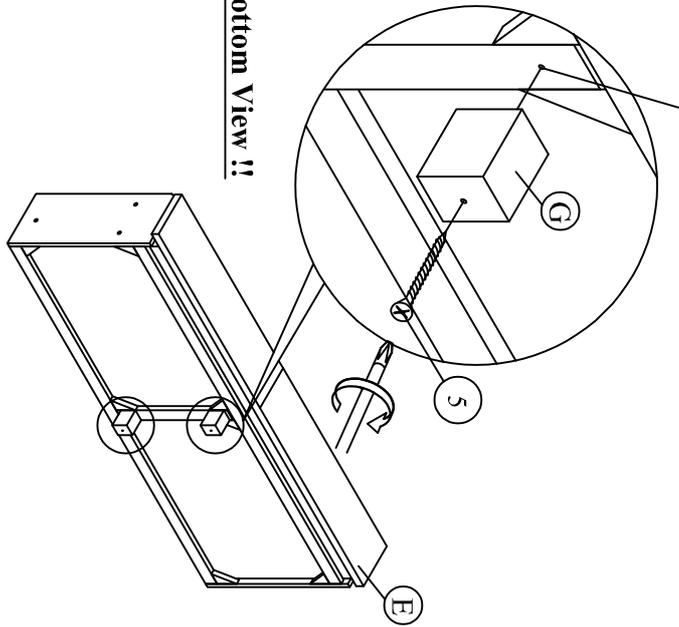


**Step 4**

3.1 Open the drawer out till its built-in stopping point  
 3.2 Put the drawer frame on the side rail leg. Make sure the drawer side align to the side rail end.  
 3.3 Attach the drawer frame to the side rails by using the JCBC and Flat Washers.

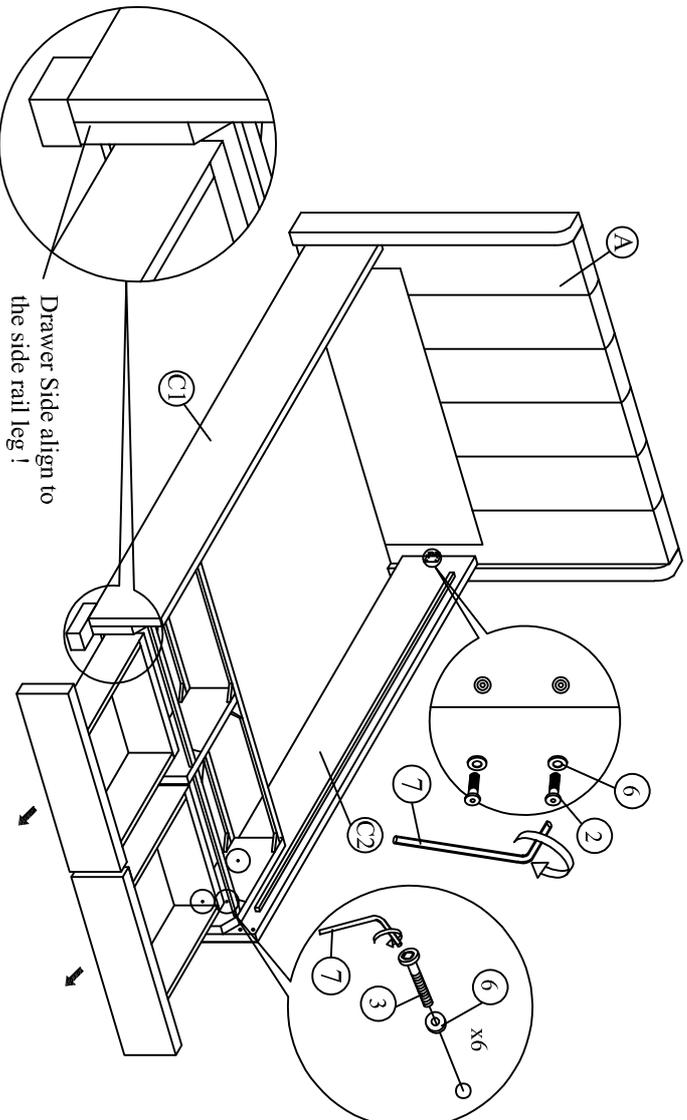

Step 5

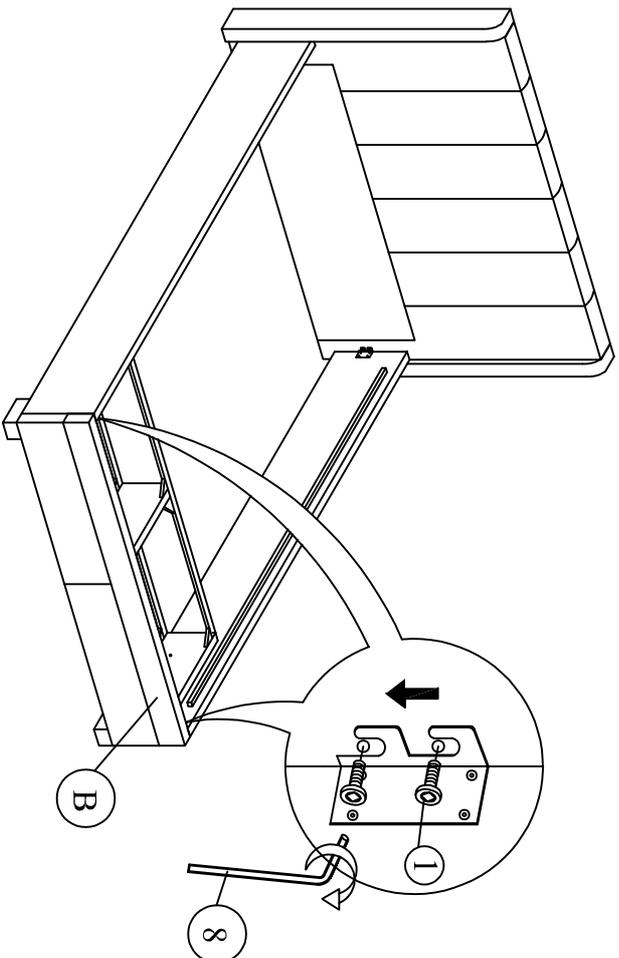

Step 6

