


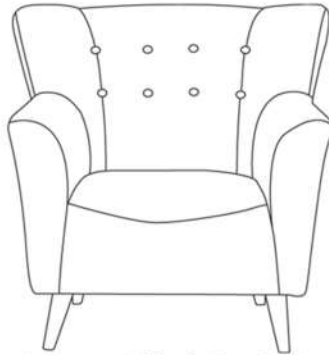

Warehouse Furniture Clearance  
ITEM CODM-Lennon(S-6981)  
Building 3 West 605 Zillmere Rd Aspley QLD 4035




**BEFORE YOU START...**

1. Always read the assembly instructions carefully before beginning assembly.
2. The packaging and contents can be a choking hazard, therefore keep out of reach of small children at all the times

**Step 1 Join sofa by back connector**

A		Feet	4PCS
B		Hexagon Key	1PCS
C		Washer	4PCS
D		Bolt	4PCS
E		Cork	4PCS
F		Felt Pads	4PCS

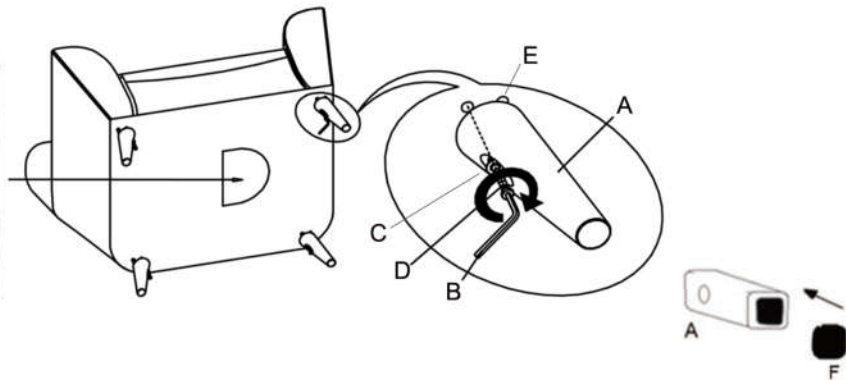

**Step 2 Assembly complete**

