









ASSEMBLY INSTRUCTION

Item code- Oakland (9206)

Imported by JCI Global

Building 3 West 605 Zillmere Rd Aspley QLD-4035

ITEM	DESCRIPTION/PART	ITEM	DESCRIPTION/PART
A	 LAH SOFABED 1PC	B	 RCF STORAGE 1PC
C	 Plastic midfoot 4 PCS	D	 Plastic foot 5 PCS
E	 Screw 10 PCS	F	 Spanner 2PCS

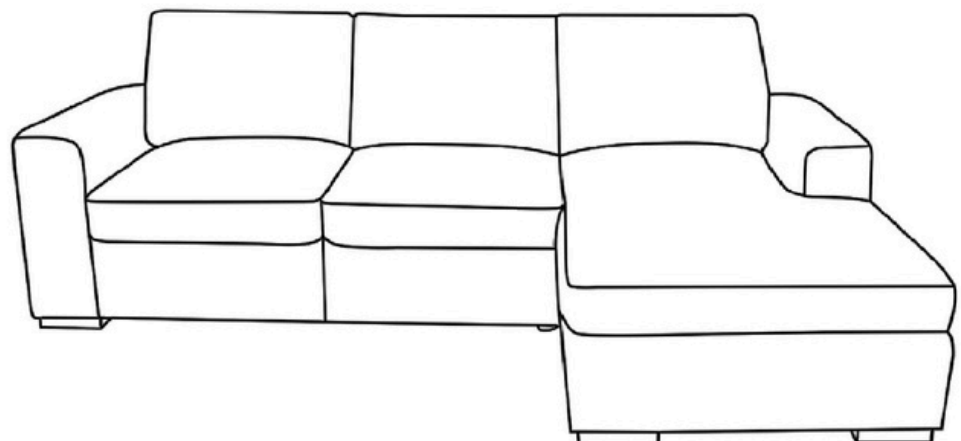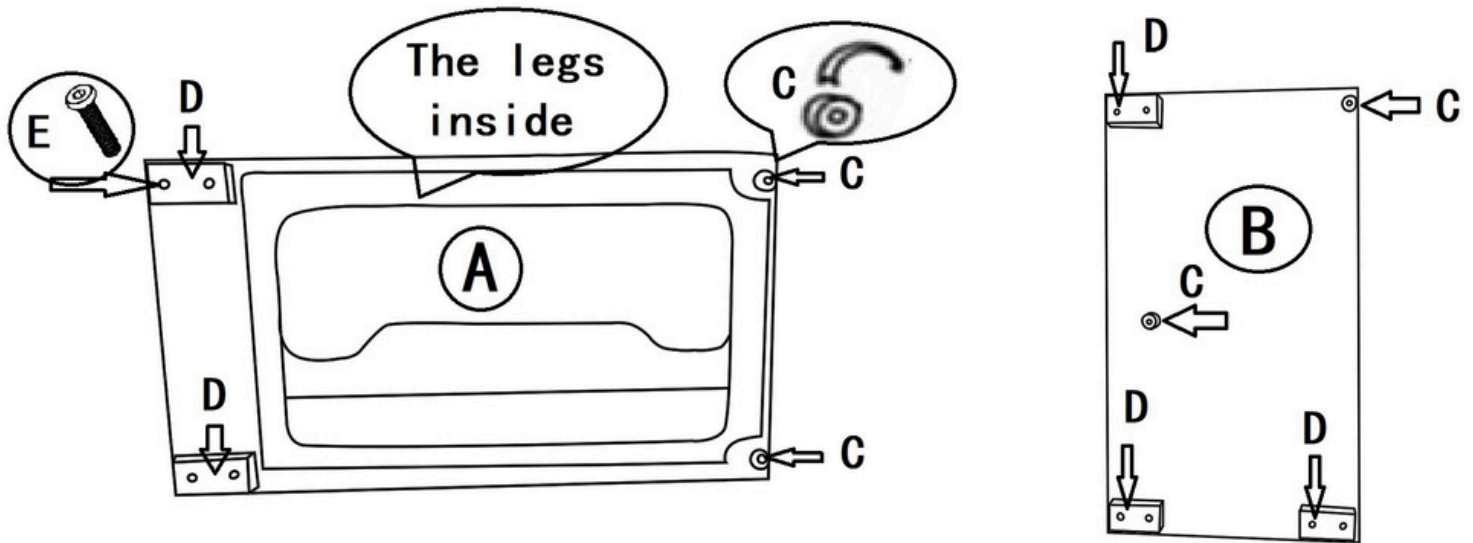

Two person required.