


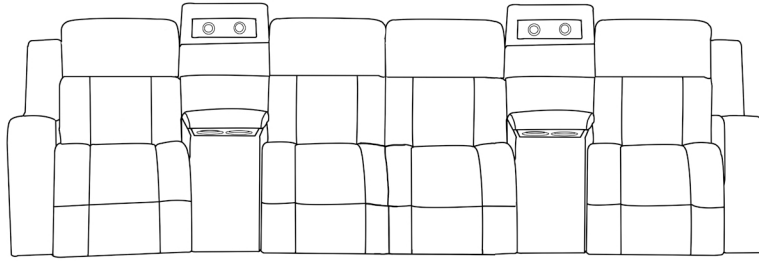

Assembly Instruction Item Code-Remi (10046)


Imported By JCI Global
Building 3 west,605 Zillmere Rd,Aspley QLD 4035



BEFORE YOU START...


1. Chose a clean,level,spacious assembly area.Avoid hard surface that may damage the product.
2. Check and ensure that you have all required contents for complete assembly.
3. Always read the assembly instructions carefully before beginning assembly.
4. The packaging and contents can be a choking hazard, therefore keep out of reach of small children at all the times

Step 1 Join sofa by back connector

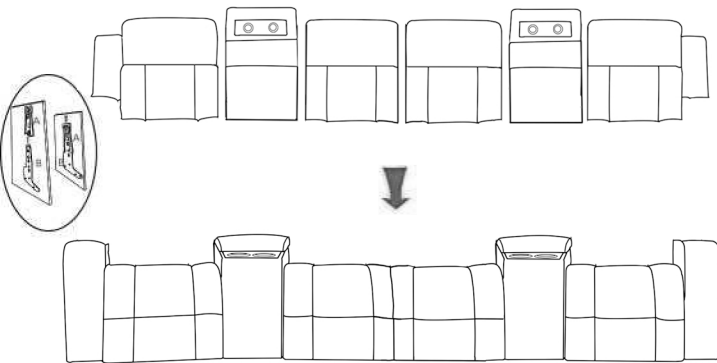


Step 2 Join the wings

Take out the wing from the bottom of the armrest, assemble it as above instruction.

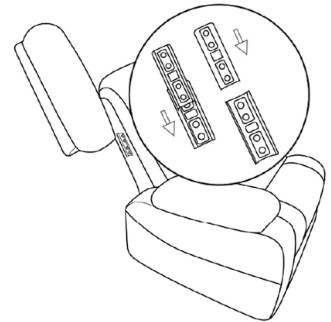

Step 3 Assembly complete

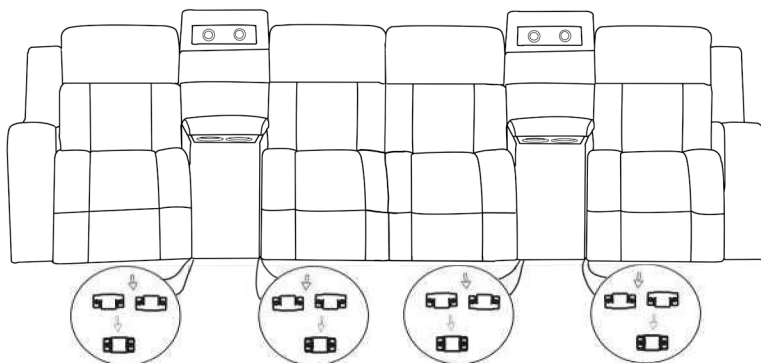

Spare Parts List

Configuration	Y Cable	Transformer	Power Line
L1E	1	1	1
A2EE	0	0	0
R1E	1	1	1

Take out the electric parts from console box of the sofa, assemble them as right instruction. For armless reclining loveseat, connect the Y cable between transformer and line under recliner.

Sectional Assemble

1. Lift the side with downward hook, let it slide into the upward hook, one by one.
2. Assembly Finished