


# Assembly Instruction Item Code- Remi (10046)

Imported By JCI Global


Building 3 west,605 Zillmere Rd, Aspley QLD 4035

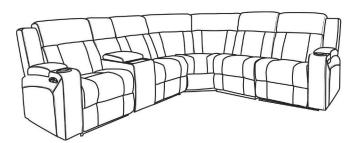


### **BEFORE YOU START...**

- 1. Chose a clean, level, spacious assembly area. Avoid hard surface that may damage the product.
- 2. Check and ensure that you have all required contents for complete assembly.
- 3. Always read the assembly instructions carefully before beginning assembly.
- 4. The packaging and contents can be a choking hazard, therefore keep out of reach of small children at all the times

## Step 1 Join sofa by back connector

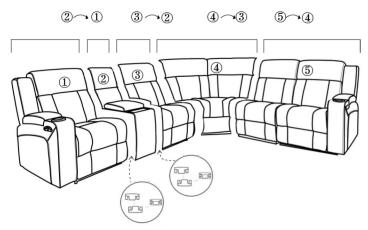


Step 3 Assembly complete

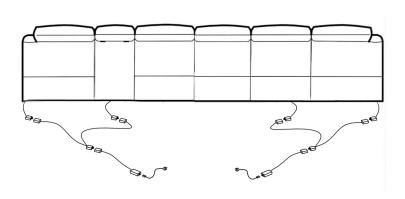

# **Step 2 Join the wings**

Take out the wing from the bottom of the armrest, assemble it as above instruction.

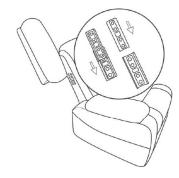

## **Spare Parts List**

	-				
	Configuration	Y Cable	Transformer	Power Line	
				•	
	L1E	1	1	1	
	R1E	1	1	1	

Take out the electric parts from console box of the sofa, assemble them as right instruction, connect the Y cable between transformer and line under recliner.

### Sectional Assemble

- Lift the side with downward hook, let it slide into the upward hook, one by one.
- 2. Assembly Finished